

Location Finder Key Chain

Quick Guide

1. Description

Location Finder Key Chain is a new-creating production which combines watch and GPS functions. Multi-point finder is an artificial intelligence e-compass. It can save your hotel and scenic spots and so on. It is a creative and useful production which with special design for traveler who fond of GPS function.

2. Main Functions

Time display: While GPS position is located, the Location Finder Key Chain will display Greenwich Mean Time.

Time Adjustment: you even can adjustment time zone in device to fit where you are.

Location Finder: LED shows the five kinds directions to you and reaching the position what you have been saved, such as car or hotel position.

GPS Receiver: Connect with your laptop; Location Finder Key Chain would become a personal navigator.

3. Packing List

Thank you for purchasing the Location Finder Key Chain. If you find any of these items are missing, please contact your local dealer or distributor.

- | | |
|------------------------------|-------|
| 1. Location finder Key Chain | 1 set |
| 2. USB cable | 1 pc |
| 3. Travel power supply | 1 set |



4. Main features


GPS chipset:

- Adopt SkyTraq Venus 6 chipset with 65-Channels for fast acquisition and reacquisition
- High sensitivity (to -160dBm)
- Excellent performance - Cold/Warm/Hot start time: 29/1 sec. (average)
- WAAS / EGNOS supported

Hardware :

- With exquisite and smooth design and portable key-chain style.
- GPS Build-in Battery: with 8 hours operation.
- Indicate five directions clearly.
- USB Interface. No installation necessary, user friendly
- Built in Bluetooth for GPS receiver function

5. Icons and Indicators

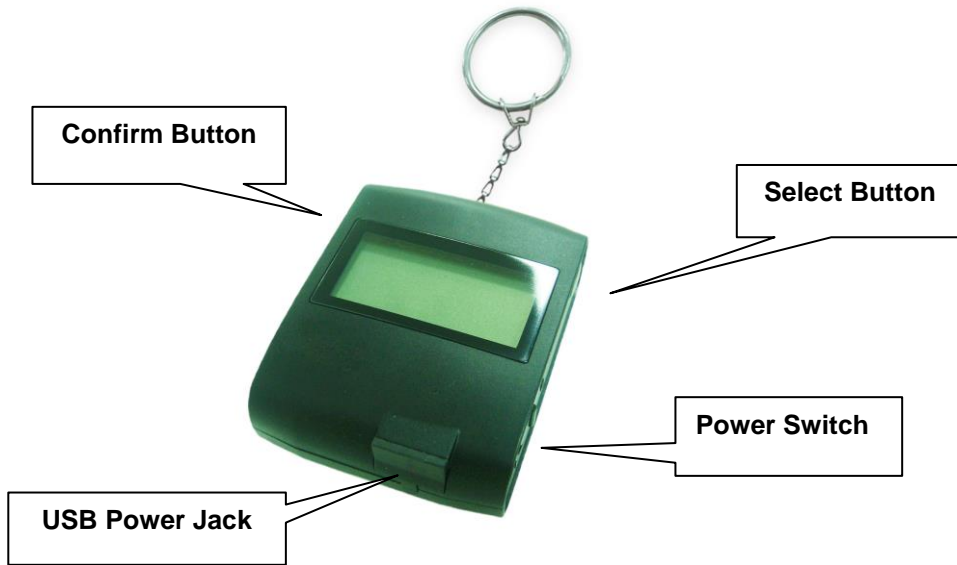


6. Operations

6.1 Before you use

- A-1. For the first time use Location Finder Key Chain, please charge the battery until it is fully charged. Take the USB wire and connect it to the USB power jack with your PC, Laptop or car cigarette adaptor. This will begin to charging battery. 3.5 hours typically for charging.
- A-2. Battery Status Indication
 - The blinking battery icon indicates low battery status, please recharge it.
 - Under charging mode while operating, the battery icon will show up while the device is on.
 - Under charging mode while operating, the backlight will light up while the device is off. Once Location Finder Key Chain is fully charged the backlight will be off.
- A-3. With fully charged, the operation time is up to 8 hours (average).

B. Explanation of Icons

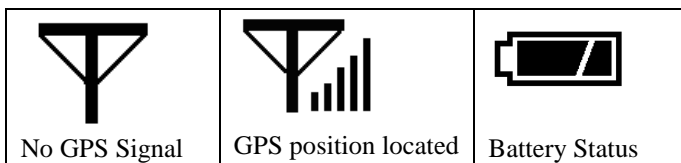

6.2 Start to use

Once Location Finder Key Chain turns on, it will search GPS signal automatically. When GPS position located, you can start to use it.
NOTE: All GPS production only workable outdoors.

C-1 Time Display


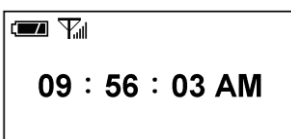


image will shows up. In first step, steps, you have to pressing so on adjust for minutes.

1-1. Display Greenwich Mean Time :


When GPS position had been located, the LED will show Greenwich Mean Time.

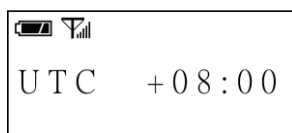

1-2. Adjustment the Time Zone:

This device is able to adjust the Time Zone of worldwide, turns the device on and pressing "Select Button" for 5 seconds, the adjustment you have to selected "plus" or "minus" by "Select Button; in next "Confirm Button" on device to adjust an hour by "Select Button", and



C-2 To User Location Finder (LF) *Note: Please confirm the GPS position is located.*

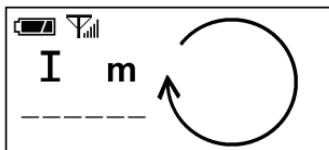

2-1. Set up the first destination in “I” position. :

Confirm the GPS position is located, go to setting interface for “I”, then pressing “confirm button” for two seconds to save current position and start to indicate.

  ** Pressing “confirm button” again, it will resave new position.*

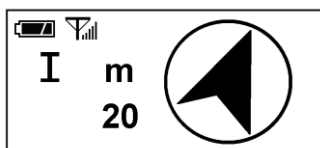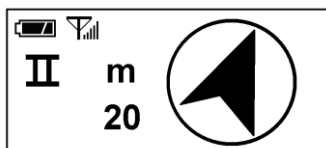


2-2. Set up the second destination in “II” position.

Confirm GPS position located, then go to setting interface for “II”, and then pressing “confirm button” for two seconds to save current position and start to indicate. And so on.

** Pressing “confirm button” again, it will resave new position.*


2-3. Start to user LF function

After GPS position is located, it would start to indicate positions you saved by switch “I,II, III, IV or V”

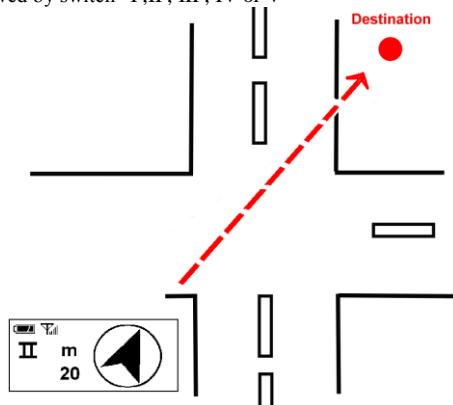

2-4. When <15m to destination, LF would finish automatically.

After GPS position is located, the arrowhead would start to indicate the direction. When destination under 15 meters, Location Finder Key Chain would finish automatically.

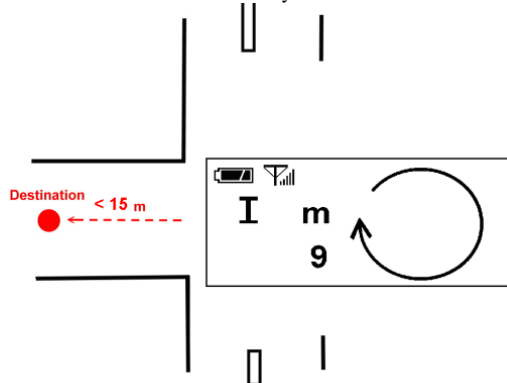

7. To use G mouse

7-1 Plug the USB wire and connect with a laptop

The laptop must have mapping software installed. (We do not provide it) After connecting with laptop by USB wire, the Location Finder Key Chain becomes your personal navigator.

8. To use Bluetooth GPS receiver

Activate the Bluetooth function in your PDA/Smart phone or PC

Before activating the Bluetooth function in your PDA/PC, please power on Bluetooth GPS Receiver for paring and check if your device is equipped with Bluetooth function. When you have to key in the password to paring device and your display, the number “0000” is particular defaults. If not, you may need to acquire an optional CF/SD Bluetooth card or Bluetooth dongle.

NOTE: The pairing procedure is required to execute in the first time only. And the pass code is “0000” if required.

8. Warranty

Our products are guaranteed to be free from defects in material and functions for a period of one year from the date of purchase. Any failure of this product within this period, under normal conditions, will be repair at no charge to the customers.