

Location Finder

Quick Guide

Thank you for purchasing Location Finder and we wish you have the best consumer product experience ever.

Description:

Record the position you want to go again,

Features:


- Adopt SkyTraq Venus 5 chipset with 44-Channel for fast acquisition and reacquisition
- High sensitivity (to -158dBm)
- Excellent performance - Cold/Warm/Hot start time: 40/35/1 sec. (average)
- Smart power saving / 14 hours usage
- Eight LEDs indicate clear directions
- No installation needed, easy to operate
- Dimension: 70.0(L) X 28.0 (W) X 20.0 (H) mm /Weight: 25g (Battery exclude)

A. Standard Package

Location Finder (1) + 650mAh Lithium-Ion Rechargeable Battery (2) + Cigarette Adapter (3) + USB Cable (4) +Anti-slide spacer (5) + Strap



B. Instruction

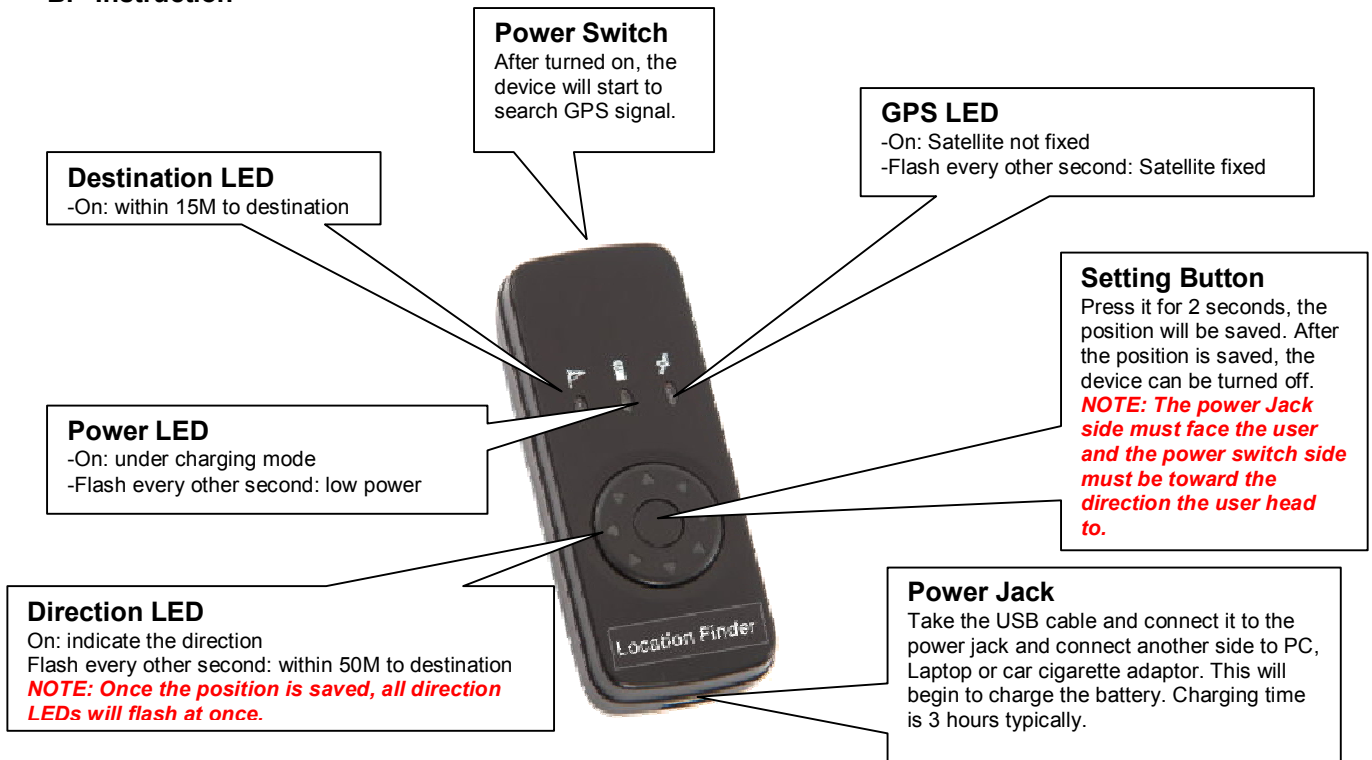

C. Look for destination (the position saved before): Turn on the power switch again. The direction LEDs will start to indicate the directions. Following the indication of the direction LEDs, the user can simply find the destination.
NOTE: The power Jack side must face the user.