



# SJ-AKB48



# User Manual



**聖傑自動科技股份有限公司**  
*Sheng Jay Automation Technologies Co., Ltd.*

# User Manual

## SJ-AKB48



## Warranty Service

Name		Model numbers	SJ-AKB48
Tel		Tracking Number	
Mobile		the date of purchase (MM/DD/YYYY)	
Address			
E-Mail			
sale agent stamp	<b>SJ-AKB48</b>		



Thank you for purchasing SJA' s products and we wish you have the best consumer product experience ever. For customer's right, please complete the date of purchase and the other information so that one year free service will be covered.

- ◎ Warranty period: 1 year as of the purchase date
- ◎ Conditions: We provide repair service free of charge but such service will be limited to normal use only. Please ask the sale agent.



- ◎ Any damage caused by misuse of users shall not be covered by the warranty hereof.
- ◎ This warranty against damage the book like to have losing, not to reissue, asks respectfully to make satisfactory the preservation.

**SJ-AKB48**



## Catalog

Appearance.....	5
Specification .....	7
Introduction .....	8
Specification .....	7
System setting .....	9
Self-created coordinate.....	15
Package.....	21
Terms and conditions.....	22



## Appearance





## Appearance introduction

	<b>Press(1 second)</b>	<b>Hole(3 second)</b>
<b>1</b>	<b>Volume down</b>	<b>Play mode setting</b>
<b>2</b>	<b>self-created coordinate</b>	<b>Function setting</b>
<b>3</b>	<b>Volume up</b>	<b>Radar setting (optional)</b>
<b>4</b>	<b>MMXC external antenna</b>	
<b>5</b>	<b>USB setting and input power</b>	
<b>6</b>	<b>LED screen display</b>	
<b>7</b>	<b>speaker hole</b>	





8

**magnet fixing bracket**

## Specification

<b>Power voltage</b>	5.0V(300mA)
<b>Speaker output</b>	1.5W
<b>GPS</b>	U-Blox
<b>Satellite amount</b>	50Channel
<b>Sensitivity</b>	-160dbm
<b>Soft boot</b>	< 1.5s
<b>Cold boot</b>	< 34s



<b>Size</b>	54.5 (L)x 58.5(W) x 21(H) mm
<b>Weight</b>	45g

## Instruction

1. Power on
  - 1-1 LED panel test, panel light on
  - 1-2 Voice report
  - 1-3 Displaying coordinates, the version is XXXX now.
  - 1-4 Driving mode display: default setting : 【safety driving speed limit mode】
  - 1-5 Radar sensitivity display 【default setting:



high】

2. Satellite condition

2-1 When the satellite connects successfully, it would announce "Have a nice trip."

2-2 The 【:】 on the LED panel blinking indicates satellites connected, and the E-compass shows the current moving direction.

6

Lost the connection with satellites 【:】 on panel steady light on, and the E-compass flashes clockwise.

SJ-AKB48



## System Setting

1. . System setting selection. Seven modes can be used.





- ◎ Press 【SET】 3 seconds to get in function selection mode, then press 【SET】 1 second to go next function. To exit the function selection mode, press 【SET】 for 3 seconds or waiting for 3 seconds after setting
- 1-1 Speeding setting  
Setting range from 0 KM to 120KM. Default setting is 50 KM. When the vehicle speed is less than 50 kilometers, device automatically muted, and only flashing panel LED lights despite close to speed radar. Automatic door in the urban areas and other noise interference can be ruled out.
- 1-2 Over speed setting  
It can be set from 0-150 km. The default value is 150 km. If set to be 100 km then vehicle is over



speeding than 100 km, the system will automatically alert speeding warning, until the vehicle speed is less than 100 km.

#### 1-3 Speed Adjustment

The settings range from 0-20 km, the default value is 5 kilometers. When the GPS speed and car speed is inconsistent, check the error average value then adjust the speed until consistent with the speed of the vehicle.

#### 1-4 Over speed voice alert setting

Three models are available. Voice alert with beep sound mode -> Voice alert mode -> Beep sound alert mode. The default setting is voice alert mode.

⊙ Voice alert with beep sound mode: When the car approaches the speed camera system, voice



- alert the user the types of speed camera, the speed limit of the road and distance count down. Once the car is over speed, device alert "dang" sounds until car speed is not over the speed limit.
- ③ Voice alert mode: When the car approaches the speed camera system, voice alert the user the types of speed camera, the speed limit of the road and distance count down
  - ③ Beep sound alert mode: When the car approaches the speed camera system, voice alert the user the types of speed camera, the speed limit of the road and distance count down then keeps voice alerting the "dang" sounds until car is passed the speed camera.



1-5 Self-define coordinates

Maximum storage is 512 sets. User can save or delete the self-define coordinates.

1-6 The bright mode setting. The default setting is at 7 AM

1-7 Somber mode setting.  
The default setting is at 6 PM.

3. **Driving mode**

**SJ-AKB48**





SJ-AKB48



▲ Press 【▼】 key for 3 seconds to enter driving mode

2.1 Safe driving speed limit mode

Provide speed camera, and distance countdown warning. Moreover, device provides advance warning about accident-prone area, shopping malls, schools, gas stations, and toll station when car approach them. Allow users to have more info of road conditions.

2.2 Speed camera system warning mode

Provide speed camera, speed limit and distance countdown warning.

2.3 Safe driving mode

Provides speed camera 、 advance warning about accident-prone area, shopping malls, schools, gas



stations information when car approach them.

#### 2.4 Speed camera system warning mode

Provide speed camera and distance countdown warning.

### Self-define coordinates

#### 1. Function instruction:

Build your own coordinates database. 512 self-define available. Voice alert you when car approaches the self-define coordinate ,and display 【PASS】 one LED



when pass self-define coordinate

## 2. How to set self-define coordinates

### Obverse direction self-define coordinates

During the driving status ,press 【SET】to get into setting mode. System alert: “Obverse direction self-define coordinates” mode.

3.2.2. Press 【▼/ ▲】to select the \*type than press SET again to go next step. In here we set type 3: Radar speed camera. (\* Refer Type list to get move information)



←自建坐標限速

 
3. 語音提示正向坐標選擇限速：螢幕顯示速度，按”▽”或”△”選擇限速速度，每按一次調整為10公里，正確選擇後按”SET”鍵確定。



4. 收集完成後，系統語音提示【正向自建坐標點儲存完成】，恢復車速顯示，若坐標類型及坐標限速未設定，則此筆自建坐標點無存儲。



## 反向自建坐標

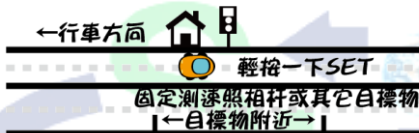

1. 當車輛行駛至照相點或目標物附近時，連續輕按SET鍵兩次。



←自建坐標類型

2. 語音提示反向坐標選擇類型：螢幕顯示坐標類型編號，語音提示坐標類型，按“▽”或“△”選擇自建坐標類型，正確選擇後按“SET”確定。



←自建坐標限速

3. 語音提示反向坐標選擇限速：螢幕顯示速度，按“▽”或“△”選擇限速速度，每按一次調整為10公里，正確選擇後按“SET”鍵確定。



4. 收集完成後，系統語音提示【反向自建坐標點儲存完成】，恢復車速顯示，若坐標類型及坐標限速未設定，則此筆自建坐標點無存儲。



Self-define coordinates type list :

0	Electronic monitoring	9	Sections of road irregularities Examiner
1	Red light speed cameras	10	Railroad crossing
2	Fixed speed cameras	11	Start point of speed detecting
3	Radar speed camera	12	End point of speed detecting
4	Mobile speed cameras	13	A one-way street



5	Viaduct speed cameras	14	Tunnel
6	Tunnel exit speed camera area	15	Gas station
7	Tunnel speed camera zone	16	Rest Stop
8	Speed camera to keep a safe distance		





### Dele self-define coordinates

Enter Dele self-define coordinate mode then press  
【▼】 twice. Select coordinate then long press 【▼】  
to dele it





## Package

<p>Magnet *1</p>	<p>USB cable *1</p>
 A black circular magnet with 'GPS' and '衛星定位指示器' (GPS Satellite Positioning Indicator) embossed on its surface.	 A black USB cable with a standard USB-A connector on one end and a smaller connector on the other.
<p>Car charger USB*1</p>	<p>User Guide *1</p>
 A black car charger with a silver base, featuring a USB port and a red LED indicator light.	 A blue book-like icon representing a user guide, with a white rectangular area on the cover.



## Repairing Rules

### The applicable objects of the above terms

- ☆ We provide the limited of one year warranty as of the date you purchased, but we are subject to the normal operation as the attached user manual only complete the date of purchase and the other information so that one year free service will be covered.
- ☆ If you didn' t complete the date you purchased, or the date you purchased is controversial. You have to provide the original certificate (or invoice). If the customers could not provide the certificate



concerned, the tracking number would depend on manufacture date.

## Warranty

- ☆ The users could send or fax the copy of the warranty with sale agent stamp.

## Covered warranty conditions

- ◇ For customer' s right, please preserve the warranty in package well.
- ◇ Manual, outer box, and carton are not covered under the warranty.
- ◇ We would charge a relevant fee for repairing if the warranty of product has been expired.
- ◇ We would charge a relevant fee for repairing



under the warranty. Whatever the problems is arising from the factors as set forth hereunder,

- (1) The label is expired.
- (2) The defect or damage is arising from act of God, user' s improper usage.
- (3) The defect or damage is arising from improper installation and unauthorized modification, download the software not designate or
- (4) The damage is caused by customer.
- (5) Using at unsuitable environment.
- (6) There' s no product guarantee to show the date of purchase.



 SJ-*AKB48*